

1.7L Electric Kettle

Instruction Manual

CKE17LM2APK





CONTENT

IMPORTANT SAFEGUARDS	. 1
PARTS AND FEATURES.	3
TECHNICAL DATE OF THE PRODUCT	.3
OPERATING INSTRUCTIONS	.4
HOW TO USE	.4
CLEANING AND MAINTENANCE	5
TROUBLESHOOTING	6
SERVICE AND SUPPORT	.7



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

- •Read all instructions.
- •Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- •To protect against fire, electrical shock and injury to persons do not immerse cord, plugs, or other live parts in water or other liquid.
- •Do not touch hot surfaces. Use handles or knobs.
- •Scalding may occur if the lid is removed during the brewing cycles.
- •Do not use outdoors. Household use only.
- •Close supervision is necessary when any appliance is used by or near children.
- •Do not use appliance for other than intended use.
- •Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- •The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- •Do not let cord hang over edge of table or counter, or touch hot surfaces.
- •Do not place on or near a hot gas or electric burner, or in a heated oven.
- •Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- •A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.



IMPORTANT SAFEGUARDS


- •Longer detachable power-supply cords or extension cords are available and maybe used if care is exercised in their use.
- •If alonger detachable power-supply cord or extension cord is used:
- -The marked electrical rating of the cord set or extension cord should beat least as great as the electrical rating of the appliance;
- -If the appliance is of the grounded type, the cord set or extension cordshould be a grounding-type 3-wire cord.
- -The longer cord should be arranged so that it will not drape over thecounter top or table top where it can pulled on by children or tripped over.
- •This appliance has a polarized plug (one blade is wider than theother). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into theoutlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

SAVE THESE INSTRUCTIONS



PARTS AND COMPONENTS

This sections identifes the features and parts of this kettle.

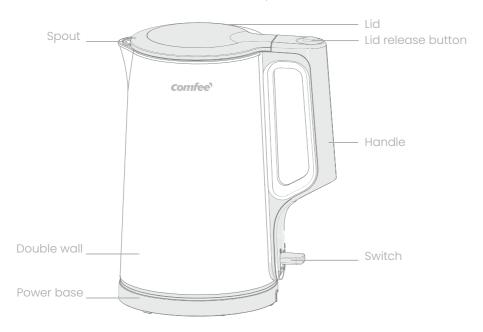

TECHNICAL DATE OF THE PRODUCT

Model No.	Rated voltage	Rated power	Capacity	Dimensions
CKE17LM2APK	120V~ 60Hz	1500W	1.7L	220*153*266mm



OPERATING INSTRUCTIONS

HOW TO USE

For first time use or if you haven't used the kettle in a long time, it is recommended that you fill to the maximum level mark with fresh tap water, boil and empty the kettle at least 2 times to clear kettle of any tiny particles. DO NOT drink initial boiled water.

Press the lid lock on the handle, and you can open it.

2 Remove the kettle from the base. Fill the kettle with desired amount(no less than the minimum and no more than the maximum.) Put back the lid; place the kettle back on the base unit.

3 Connect the plug into a power outlet (120V,AC), switch the kettle on by pressing down the switch. The light will illuminate to indicate the kettle is heating.

4 The kettle will automatically switch off once the water has boiled and the neon light goes off.



CLEANING AND MAINTENANCE

CAUTION

To prolong the life of the kettle, on a regular basis clean mineral deposits that accumulate in the kettle. ALWAYS unplug the unit before cleaning. ALWAYS allow appliance to cool completely before handling.

WARNING

Do NOT immerse the power base in water or any other liquid.

- Fill the kettle with 0.5L white vinegar and the remainder with water and allow to stand for over 1 hours.
- Empty the solution from the kettle. Wipe off the deposits remained with damp cloth.
- Fill the kettle with clean water, bring to boil and then discard the water. Repeat and the kettle will be ready to use.
- If necessary, repeat the operations above a few more times.
- DO NOT immerse in water. The surface of the kettle can be wiped clean with a damp cloth and plished with a soft dry cloth.



TROUBLESHOOTING

The following tables contain possible causes and notes for resolving an error message or malfunction. It is recommended to read the table below carefully in order to save you time and money that may cost for calling to the service center.

Problem	Possible Cause	Solution	
The machine does	The power cable is not plugged in or has poor contact.	Make sure the plug is properly inserted into the socket.	
not work properly after installed	The switch on the body is not turned on.	Turn on the switch on the body.	



Any other servicing should be performed by an authorized service representative.



SERVICE AND SUPPORT

1 YEAR LIMITED WARRANTY

This is the only express warranty for this product and is in lieu of any other warranty or condition. This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning the product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value. This warranty does not cover wear from normal use, and operation doesn't conformity with the instruction manuals, or damages to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if products is used for other than singlefamily household use or subjected to any voltage and waveform other than as specified on the label.

We exclude all claims for special, incidental, and consequential damages by breach of express or implied warranty. All liability is limited to amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchant-ability or fitness for particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.

This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental consequential damages, so the foregoing limitations may not apply to you. Please note that failure to complete and submit this form does not diminish your warranty



In the Event of a warranty period claim, question, comments or if service is required for this product, please contact us at the following:

Customer Service Management Office:

Parsippany, NJ 07054 Toll Free: 1-866-646-4332

Amazon Store:

https://www.amazon.com/comfee

Tel: 866-646-4332

E-mail: officialservice@comfeeappliance.com

Made in China

