

comfee'
...is how I blend!

Compact Personal Blender with Travel Cups

CFB30P2ST

Instruction Manual



IMPORTANT NOTE:

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.



Owner's Manual

IMPORTANT SAFEGUARDS	3
PARTS AND FEATURES	6
USING THE BLENDER	7
CLEANING AND MAINTENANCE.....	8
PRODUCT INFORMATION	8

OPERATING AND SAFETY HINTS

Inside you will find many helpful hints on how to use and maintain your Compact Personal Blender properly. Just a little preventive care can save you a great deal of time and money over the life of your appliance.



CAUTION

- This appliance is not intended for use by people (including children) with reduced physical, sensory, or mental capabilities.
- Close supervision is necessary when any appliance is used by or near children.
- Do not use appliance for other than intended purposes. **FOR HOUSEHOLD USE ONLY.**

Welcome

You are about to see how quick, easy, and delicious healthy eating can be!

Please read all the safety information, warnings, and instructional material found in this booklet before getting started. Set your Compact Personal Blender on a flat, sturdy surface before unpacking. When using an electrical appliance, basic safety precautions should always be followed.

IMPORTANT SAFEGUARDS

To prevent injury to the user or other individuals and property damage, the instructions shown here must be followed. Incorrect operation due to ignoring of instructions may cause harm or damage. The level of risk is shown by the following indications.



WARNING

This symbol indicates a hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

This symbol indicates a hazardous situation, which, if not avoided, could result in minor or moderate injury.



NOTICE

This symbol addresses practices not related to physical injury.



WARNING

Read all instructions

- Make sure all packaging materials and promotional stickers have been removed before using the appliance for the first time.
- Make sure children do not play with the packaging material.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- This appliance is intended for household use only. Do not use outdoors.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning or removing contents from blender jar or cup. Never put hands into the blender jar or cups, or handle the blades with appliance plugged in. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- CAUTION: In order to avoid a hazard this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- Avoid contact with moving parts.
- Never leave the appliance unattended while it is functioning.
- Do not use or store this appliance outdoors.
- Do not use this appliance for other than intended use.
- Do not operate the appliance with wet hands.

- Check carefully that the voltage and frequency of the power net match the indications on the rating label of the appliance.
- The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local standards and requirements.
- Only use the utensils included with the appliance.
- Keep hands and utensils out of blender jar while blending to reduce the risk of severe injury to persons or damage to the blender (another trade name may be used). A scraper may be used but must be used only when the blender is not running (does not apply to an acceptable scraper integral with the appliance).
- Blades are extremely sharp. When handling blade assembly, always hold by the shaft. Handle carefully.
- To reduce the risk of injury, never place cutter-assembly blades on base without blender jar properly attached.
- To avoid a risk of injury, before pouring with the cover removed, carefully remove the blade assembly.
- Do not operate this appliance with a damaged cord or plug or in the event the appliance malfunctions or has been damaged in any manner. Return the appliance to the Comfee Service Department or its service agent for examination, repair, or electrical or mechanical adjustment. Do not try to repair the appliance yourself.
- To protect against electrical shock or burns, do not immerse unit, cord, or plug-in water or other liquid.
- A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord. DO NOT USE WITH AN EXTENSION CORD.
- Unwrap the cord completely to prevent overheating of the cord.
- Do not let the power supply cord hang over the edge of a counter or touch hot surfaces.
- Do not allow the power cord supply to run underneath or around the unit.
- Do not use the appliance if there is any water in it or the parts are still wet after cleaning.
- Do not use the appliance without ingredients.
- Handle with great care when using sharp accessories like knives. Only handle when food content stops moving inside the appliance.
- Failure to maintain this appliance in a clean condition could adversely affect the life of the appliance and possibly result in a hazardous situation.
- Any injury or damage caused by failure to comply with these rules are at your own risk. Neither the manufacturer, importer, nor the supplier may be held liable.
- Always operate blender jar with the cover in place.
- Never leave your blender unattended while running.
- The use of attachments, including canning jars, not recommended by the manufacturer may cause a risk of injury to persons
- Risk of thermal burn injury due to excessive pressure in the container. Do not blend hot liquids.

NOTICE

The failure to follow any of the important safeguards and the important instructions for safe use is a misuse of your product that can void your warranty and create the risk of serious injury.

RECYCLING




The appliance must not be disposed of with household waste but taken to an authorized waste separation and recycling center.

SAVE THESE INSTRUCTIONS

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

PARTS AND FEATURES

Parts

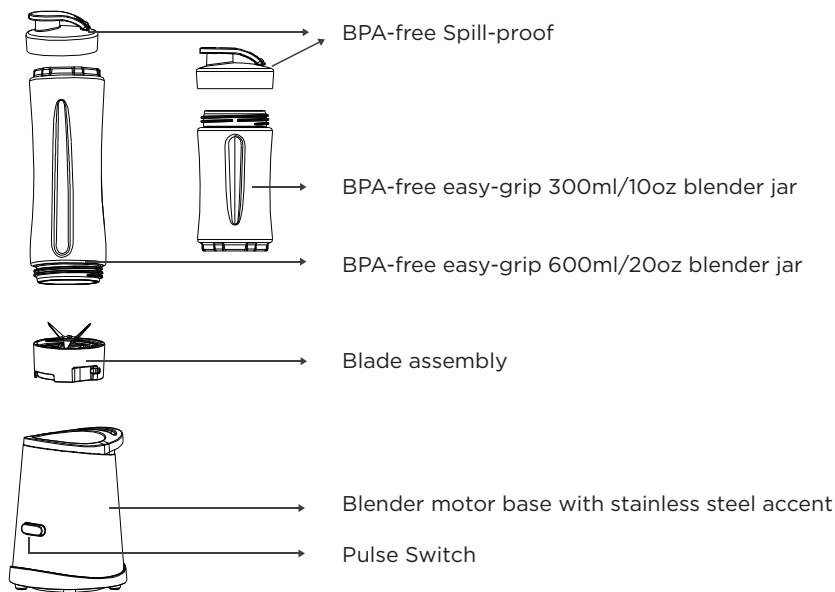

Features

- **BPA-free easy-grip blender jar:** Cover and pour lid has a unique, sturdy design for all your blending needs. Blend fruit, vegetables, ice etc. into beverages. Reusable, dishwasher safe, durable, and tasteless. The bottle does not absorb any tastes or smells.
- **The blade assembly:** Strong enough for all blending, chopping and grinding tasks. They are self-aligning so that the blender jar easily fit on the base.
- **Spill-proof BPA-free travel cups with lids:** Make your favorite drinks: smoothies, protein, health and diet drinks and more to go!
- **Pulse function:** Used to break apart larger pieces of food. The Pulse function is also effective for starting the blending process.
- **Slip-proof feet:** Prevent movement during use and prevent damaging marks on countertops or tables.
- **Cord storage (not shown):** Keeps countertops safe and neat by conveniently storing excess cord.
- **Overheat protection.**

USING THE BLENDER



CAUTION

1. This blender is for making juice, and please cut all solid vegetables and fruit into pieces no larger than 2,5 cm (1.0 in.).
2. Do not use the blender for making sticky food like dough, puree, honey, or grinding meat, nuts etc.
3. Do not blend hot liquids or carbonated beverages in chopper and blender jar.
The blender is only suited for blending cold ingredients. Also, do not put the blender or the blender jar into a microwave oven. Do not use to heat up liquids.
4. The blender can also crush ice. However, always add enough liquid to ensure the ice can move around.
5. The blender has a built-in safety at the start-up. The blender jar must be placed correctly into the base before you can start the blender.
6. Do not fill the blender jar past the max top line on the blender jar.
If the motor sputters, switch off the blender immediately, pull the plug from the socket and let the appliance cool down for at least 10 minutes.
7. Clean the blender according to the instructions in the “Cleaning and maintenance” section.

STEP 1: Fill the blender jar with your favorite ingredients. Make sure that the ingredients do not exceed the 600 ml indication on the blender jar, or the 300 ml indication on the smaller blender jar.

STEP 2: Carefully hold the blade assembly by the bottom of the base, the blades turned away from you, and secure it on the opening of the blending bottle by screwing it on.

STEP 3: Place the blender base on a flat surface and plug it in.

STEP 4: Turn the blender jar, with the blade assembly attached to it, upside down, line up the arrow on the blender jar with the arrow on the base and push the jar into the base. Turn the blender jar clockwise to lock it into the base.

STEP 5: Push the button to start blending. Release the button to stop blending.

STEP 6: Stop the blender when everything is mixed as desired. Turn the blender jar counterclockwise and remove the jar from the base.

STEP 7: Turn the blender jar upside down, remove the blade assembly from the jar and screw the drinking lid on to the jar. This way you can take the jar with you as a drinking Travel Cup.

CLEANING AND MAINTENANCE



CAUTION

The edges of the blades are very sharp. Cleaning the blender must be done carefully.

1. Pull the plug from the socket and disassemble the accessories before cleaning the appliance.
2. Use a damp cloth to clean the outside of the blender base. Never immerse the blender base in water or other liquids.
3. Except for the base, you can clean all parts in water: the drinking lid, the blender jars and the blade assembly.
4. When not using the blender for a longer period, save it in a well ventilated, dry place to prevent the motor of the appliance from being affected by humidity.
5. Any other service should be performed by an authorized service representative.

PRODUCT INFORMATION

Specifications

Model	CFB30P2ST
Rated Voltage	120V
Rated Frequency	60Hz
Rated Power	300W

comfee'
...is how I feel!

