 


**Comfee**

# ELECTRIC KETTLE

## Instruction Manual

CKE17L1HBPH

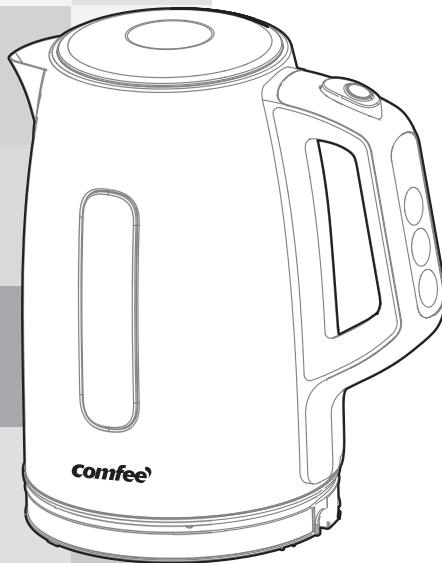

**IMPORTANT NOTE:** For your safety and continued enjoyment of this product, always read the instruction Manual carefully before using.

# **CONTENT**

IMPORTANT SAFEGUARDS .....	1
PARTS AND FEATURES .....	3
OPERATION INSTRUCTIONS .....	4
CLEANING AND MAINTENANCE .....	11
TROUBLESHOOTING .....	12
SERVICE AND SUPPORT .....	13

## **IMPORTANT SAFEGUARDS**

- When using electrical appliances, basic safety precautions should always be followed including the following:
- Read all instructions.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- To protect against fire, electrical shock and injury to persons do not immerse cord, plugs or other live parts in water or other liquid.
- Do not touch hot surfaces.
- Scalding may occur if the lid is removed during the brewing cycles.
- Do not use outdoor. Household use only.
- Close supervision is necessary when any appliance is used keep away from children.
- Do not use appliance for other than intended use.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

 
## **IMPORTANT SAFEGUARDS**

- A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- Longer detachable power-supply cords or extension cords are available and maybe used if care is exercised in their use.
- If a longer detachable power-supply cord or extension cord is used:
  - The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
  - The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
- Do not use appliance for other than intended use.

## **SAVE THESE INSTRUCTIONS**

# **PARTS AND FEATURES**

## **TOP VIEW**

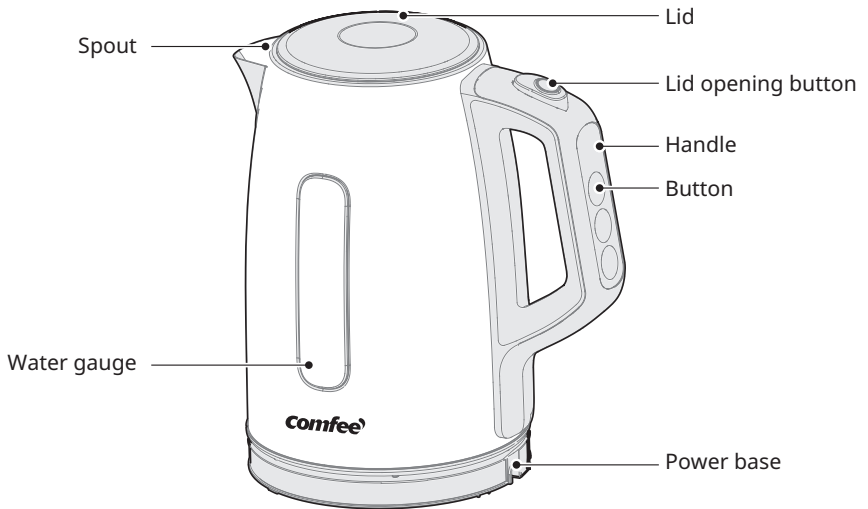

## **TECHNICAL DATA OF THE PRODUCT**

Model	Rated voltage	Rated power	Capacity
CKE17L1HBPH	120V~ 60Hz	1500W	1.7L

**NOTE**


Il the pictures in this manual are for explanation purpose only. Any discrepancy between the real object and the illustration in the drawing shall be subject to the real subject. The product is subject to the actual product and configuration.

# OPERATION INSTRUCTIONS

---

## CONTROLS/FUNCTIONS

 
---

Power (  )

Press button to begin boiling, or after selecting a custom temperature to begin heating.

Temperature (  )

Allows you to set the desired temperature for heating or Keep Warm from 105°F-205°F

Keep Warm (  )

Allows you to enable or to disable the Keep Warm mode.


 
 

## BEFORE FIRST USE

---

1. Read all instructions and important safeguards.
2. Remove all packing materials and make sure that the product has been received in good condition.
3. Wipe out the interior of the kettle with a damp cloth. If your hand will not fit inside the kettle, swish warm, soapy water around in the interior of the kettle with the lid closed.
4. Rinse out the inside of the kettle thoroughly with water.
5. With a damp cloth, gently wipe off the exterior of the kettle. Do not wipe off electrical components as this may cause damage to the unit.
6. Dry all parts completely.
7. It is recommended to run your kettle through one boiling cycle before first use. Following the instructions in “Heating Water” on page 7, boil one kettle of water. When water has boiled, pour it out and rinse the inside of the kettle once more. The kettle is now ready for use.

## HEATING WATER

---

1. Place power base on a sturdy, level, and dry surface.
2. Make sure that the removable filter is properly inserted. See “Removing/Inserting the Filter” on page 9 for instructions on inserting the filter.
3. Open the lid and fill with water. Water must be filled between the Min and Max levels inside the kettle.
4. Close the lid securely. The lid will make a light “click” sound when it locks into place.
5. Plug the power cord into a wall outlet and place the kettle onto the power base. The kettle will beep once and the indicator lights will flash.
6. Press (  ) to start boiling (212°F), or (  ) to select a custom temperature followed by (  ) to begin heating. When using (  ) to select a custom temperature, the temperature will increase by 10 degrees up to 205°F with each button press.

# OPERATION INSTRUCTIONS

---

7. The digital control panel will display the water's increasing temperature as it heats.
8. Once the water reaches the set temperature, the kettle will beep three times signifying the end of the cycle.
9. If Keep Warm (🌊) mode was not selected at the beginning of the cycle, the kettle will enter standby mode.
10. Using the handle, lift the kettle off the power base to serve. Do not touch the stainless steel kettle Body as it will be hot.
11. When finished serving, pour out any remaining water and unplug the power cord.

## CAUTION

Never fill kettle with any liquid other than water.

Never open the lid while water is boiling.

To avoid boiling water spilling out; never exceed the MAX line when filling.

## NOTE

- Use distilled water when possible for best taste and to minimize mineral build-up in the kettle.
- Lifting the kettle in the middle of heating cancels the process.
- If the kettle is heated with no water, the internal safety mechanism will automatically turn the kettle off.
- During the heating process, the temperature setting can still be adjusted as long as the temperature setting has not been reached.

## USING KEEP WARM TEMPERATURES

---

1. Place power base on a sturdy, level, and dry surface.
2. Make sure that the removable filter is properly inserted. See "Removing/Inserting The Filter" on page 9 for instructions on inserting the filter.
3. Open the lid and fill with water. Water must be filled between the Min and Max levels inside the kettle.
4. Close the lid securely. The lid will make a light "click" sound when it locks into place.
5. Plug the power cord into a wall outlet and place the kettle onto the power base. The kettle will beep once and the indicator lights will flash.
6. Using the (🌊) button, set the desired temperature. Press (🌊) button to initiate the Keep Warm mode at the end of the heating cycle, then press the (🔌) button to start heating.
7. Once the set temperature is reached, the kettle will beep 3 times and automatically switch to Keep Warm mode, and hold the water at that temperature for 60 minutes.
8. After 60 minutes of Keep Warm, the kettle will beep twice, and the indicator lights will shut off. The kettle will automatically shut down and enter standby mode.

# OPERATION INSTRUCTIONS

---

## ⚠ CAUTION

To avoid boiling dry, never leave kettle unattended while using Keep Warm function.

## 🔊 NOTE

- After setting the custom temperature or Keep Warm temperature, and press the (⏻) button to start heating, if the kettle is lifted during the heating process, any custom temperature settings (including Keep Warm) will be lost.
- Once the kettle is in Keep Warm mode, the kettle may be lifted off the power base to serve. If the kettle is not replaced in 2-3 minutes, the Keep Warm function will be canceled.  
Pressing (⏻) during the Keep Warm mode will immediately cancel the function.
- During Keep Warm mode, the temperature can still be adjusted by pressing the (⏻) button.

## SUGGESTED BREWING TEMPERATURES

---

Drink/Food	Suggested Temperature
French Press Coffee	195°F
Oolong Tea	175°F
Green Tea	160°F-175°F
Black Tea or Herbal Tea	212°F
White Tea	160°F
Noodles or Oatmeal	212°F
Hot Chocolate	212°F



# OPERATION INSTRUCTIONS

 
---

## REMOVING/INSERTING THE FILTER

---

### TO REMOVE THE FILTER:

1. Do not attempt to remove filter until the unit has cooled completely. Open the lid and press in each of the two tabs on the front of the spout to release the filter. From inside the kettle, grasp the angled tab on the filter and pull upward. The filter should slide out easily.
2. Wash and rinse the filter, then replace.

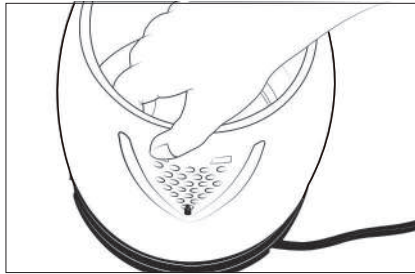

### TO INSERT THE FILTER:

1. Open the lid.
2. Grasping the filter at the angled tab, insert the bottom tab first followed by the top two tabs on the filter. Slide the filter into the slots on the inside of the spout until the filter sits securely into place.
3. Once the filter is securely in place, the kettle will be ready for use.



# OPERATION INSTRUCTIONS

---

## **⚠ CAUTION**

Never fill kettle with any liquid other than water.

Never open the lid while water is boiling.

If the lid is not completely closed the kettle will not automatically turn off.

To avoid boiling water spilling out, never exceed the MAX line when filling.

## **💡 NOTE**

- It is necessary for the filter to be properly in place for the kettle to shut off automatically.
- Use distilled water when possible for best taste and to minimize mineral build-up in the kettle.

## **MINERAL DEPOSITS**

---

Hard water can leave mineral deposits that create scale build-up on the interior of the kettle. If mineral deposits occur, follow these steps:

1. Fill the kettle halfway with water.
2. Following instructions in “Heating Water” on page 7, bring the water to a boil.
3. Add one cup of white vinegar to the water in the kettle.
4. Allow the mixture to soak overnight.
5. Empty the mixture and rinse out the kettle.
6. Refill the kettle with water only. Bring it to a boil and empty again. Repeat as needed.

## **RECIPES**

---

### **Honey Mint Tea**

4 tbsp. honey  
1-2 fresh mint leaves  
1 lemon wedge (about 1/4 lemon)  
4 cups hot water

Boil 4 cups of water with your water kettle. Add 1 tablespoon of honey to 4 heat-safe mugs. In a separate bowl or cup, muddle together mint and lemon juice and evenly distribute between the mugs. Pour hot water over ingredient mix.

# OPERATION INSTRUCTIONS

---

## **Hot Peanut Butter Cup**

4 packets\* hot cocoa mix  
8 tsp. peanut butter  
3 cups hot water

\* 1 cocoa mix packet is approximately 1.5 tablespoons.

Boil 3 cups of water with your water kettle. Allow to cool slightly. Add cocoa mix packet\* of your choice and 3/4 cup of hot water to 4 heat-safe mugs. Mix in 2 teaspoons of peanut butter to each mug. Allow to cool and enjoy!

## **Chai Tea Latte**

8 bags chai spice black tea  
1 cup hot water  
2 cups whole milk  
1 tsp. cinnamon  
1 tsp. nutmeg

Boil at least 1 cup of water with your water kettle; boil more water if you like it more diluted. Place 2 tea bags each in 4 heat-safe mugs. Steep with 1/4 cup of water in each mug for 3-5 minutes. Remove tea bags and discard.

Pour the milk into a separate bowl and whisk until frothy. Pour over each mug of tea; top with a sprinkle of cinnamon and nutmeg.

## **Spiced Cider Tea**

2 tbsp. cinnamon  
4 whole cloves  
4 bags black tea  
4 cups apple cider  
4 tsp. sugar  
4 cups hot water

In 4 heat-safe mugs, add 1 cup of apple cider, 1/2 tbsp cinnamon, 1 clove, 1 tea bag, and 1 tsp sugar.

Boil water in your kettle. Pour over the mixture in the mugs, about 1 cup per each mug. Let steep for 5 minutes, then remove tea bags and cloves. Stir to combine and enjoy!

# OPERATION INSTRUCTIONS

---

## **Mocha Coffee**

4 packets\* hot cocoa mix  
8 tsp. instant coffee  
4 cups hot water  
4 tsp. sugar  
4 tbsp. milk

\* 1 cocoa mix packet is approximately 1.5 tablespoons.

Boil 4 cups of water with your water kettle and allow to cool slightly. In 4 heat-safe mugs, add the packets\* of cocoa mix, 2 tsp coffee, 1 tsp sugar and 1 tsp milk. Add 1 cup hot water to each mug. Stir to combine and enjoy!

## **Egg Drop Ramen**

2 packs instant ramen noodles  
6 cups hot water  
2 eggs  
2 tsp. chopped scallions  
1 tsp. sesame oil  
1 tbsp. soy sauce

Boil 6 cups of water in your kettle. Place the dried noodles in 2 heat-safe bowls. If desired, pour the flavor packets over the noodles. Carefully pour 2 cups of hot water over each of the bowls of noodles. Let sit for about 3 minutes then stir. Re-boil the remaining 2 cups of water. Pour over the noodles and add an egg to each. Stir thoroughly until the egg is distributed. Add in the sesame oil, soy sauce, and scallions.

# CLEANING AND MAINTENANCE

---

Always unplug the kettle and allow it to cool completely before cleaning.

- Wipe the exterior of the kettle with a damp cloth, taking care to avoid the electrical components.
- Clean the interior of the kettle with a soft sponge and warm, soapy water. If your hand does not fit in the lid opening, swish warm, soapy water around inside of the kettle with the lid closed.
- Rinse any remaining soapy water from the kettle.
- Drain.

## CAUTION

Always unplug the kettle and allow it to cool completely before cleaning.

Never immerse the kettle, power cord, plug or power base in water.

## NOTE

- Never attempt to disassemble the kettle or the power base.
- Always take care not to allow electrical components to come into contact with water.
- Do not use abrasive cleaners or scouring pads of any kind on the kettle or power base. This will cause damage to the finish and may create a risk of electrical shock.
- Please follow instructions and caution statements for cleaning and user-maintenance, any other servicing should be performed by an authorized service representative.

# TROUBLESHOOTING

Operation of your appliance can lead to errors and malfunctions. The following tables contain possible causes and notes for resolving an error message or malfunction. It is recommended to read the tables carefully below in order to save your time and money that may cost for calling to the service center.

Problem	Solution
<p>There are mineral deposits on the interior of the kettle.</p>	<ul style="list-style-type: none"> <li>• A certain amount of scale build-up is normal after long periods of use and is caused by minerals contained in hard water. The best way to prevent mineral deposits is to always use distilled water in the kettle.</li> <li>• To remove deposits, try filling the kettle halfway with water and adding a few slices of lemon, then boil. If this does not work, please see MINERAL DEPOSITS above.</li> </ul>
<p>The kettle function does not work after setting the temperature.</p>	<ul style="list-style-type: none"> <li>• Make sure the kettle is seated properly on the power base and that the base is connected to a functioning electrical outlet.</li> <li>• If the kettle is heated with no water, the internal safety mechanism will automatically turn the kettle off. The kettle will begin working again when water is added.</li> <li>• If the set temperature is lower than the actual temperature in the kettle, the kettle will beep 3 times and turn off.</li> </ul>

# SERVICE AND SUPPORT

---

## **1 YEAR LIMITED WARRANTY**

This is the only express warranty for this product and is in lieu of any other warranty or condition. This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning the product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover wear from normal use, and operation doesn't conform with the instruction manuals, or damages to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if products is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the label.

We exclude all claims for special, incidental, and consequential damages by breach of express or implied warranty. All liability is limited to amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchant-ability or fitness for particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental consequential damages, so the foregoing limitations may not apply to you. Please note that failure to complete and submit this form does not diminish your warranty.

In the Event of a warranty period claim, question, comments or if service is required for this product, please contact us at the following:

Customer Service Management Office:  
Parsippany, NJ 07054  
Toll Free: 1-866-646-4332

Amazon Store:  
<https://www.amazon.com/comfee>  
Tel: 866-646-4332  
E-mail: [officialservice@comfeeappliance.com](mailto:officialservice@comfeeappliance.com)  
Made in China









**comfee'**  
*... is how i feel !*