

**comfee**<sup>®</sup>  
*...is how I drink!*



CKE06LIEBASK

# 0.6L Electric Kettle


## Instruction Manual



**IMPORTANT NOTE:** For your safety and continued enjoyment of this product, always read the instruction Manual carefully before using.

## **CONTENT**

IMPORTANT SAFEGUARDS.....	1
PARTS AND FEATURES.....	4
TECHNICAL DATE OF THE PRODUCT.....	4
OPERATING INSTRUCTIONS.....	5
BEFORE USE.....	5
OPERATION.....	6
HOW TO POUR.....	7
CLEANING AND MAINTENANCE.....	8
CLEANING THE INTERIOR OF THE KETTLE.....	8
CLEANING THE EXTERIOR OF THE KETTLE.....	8
SERVICE AND SUPPORT.....	9



## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and injury to persons, do not immerse cord, plugs, base or kettle in water or other liquid.
- Never leave the appliance unattended when in use. Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, no water in kettle, filling water, moving kettle and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Call our toll-free Customer Assistance Number for examination, repair or adjustment.
- Do not use a base unit other than the one supplied. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces. Always store excess portion of the power cord in the compartment of the base unit.
- Electric kettle must be operated on a flat surface. Do not place on or near a hot gas or electric burner, or in a heated oven, or on the top of other electric appliances.
- plug cord into the wall outlet. To disconnect, turn control to off, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- To avoid circuit overload, do not operate another high wattage appliance on the same circuit.

## IMPORTANT SAFEGUARDS

- Do not fill kettle when positioned on base. Dry the water on the bottom of the body before placing it onto the power base.
- Be aware of steam being emitted from spout or lid especially during refilling. Do not remove lid during boiling cycle.
- Do not use the kettle to heat anything other than water.
- Do not fill above the "MAX" indication marking. Do not operate kettle if water is below the "MIN" indication marking. Do not overfill to prevent the risk of spillage. The kettle is only to be used with the base unit provided.
- Do not insert any object into slots or holes of the kettle.
- Open the lid with the release button only. Push lid down to lock in place.
- Scalding may occur if the lid is removed during the brewing cycles.
- This appliance is for HOUSEHOLD USE ONLY.  
DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.
- Keep the kettle out of the reach of children. Do not leave children unsupervised with the kettle.
- This appliance should not be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have are supervised by the person who is responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

## IMPORTANT SAFEGUARDS

- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, office and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - In bed and breakfast type environments;
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Warning: Avoid spillage on the connector.
- If there is damage of any kind or if the kettle is not operating properly, stop using the kettle and unplug it immediately.

## SAVE THESE INSTRUCTIONS.


**Warning: Misuse may cause potential injury. The heating element surface is subject to residual heat after use.**



The appliance must not be disposed of with regular household waste. At the end of its service life, the appliance must be properly delivered to a collection point for the recycling of electrical and electronic equipment. By collecting and recycling of old appliances, you are making an important contribution to the conservation of our natural resources and provide for environmentally sound and healthy disposal.

## PARTS AND COMPONENTS

This sections identifies the features and parts of this kettle.

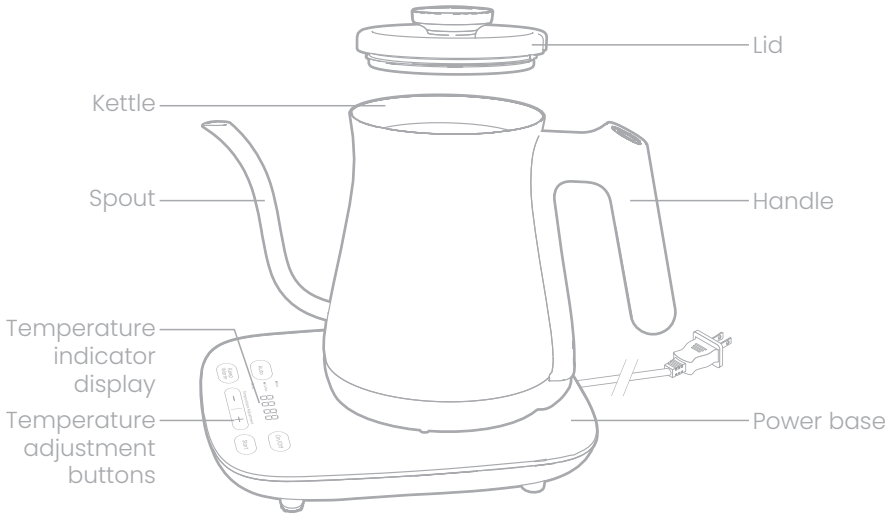


## TECHNICAL DATE OF THE PRODUCT






Model No.	Rated voltage	Rated power	Capacity	Dimensions
CKE06L1EBASK	120V~ 60Hz	1500W	0.6L	223*268*221mm


# OPERATING INSTRUCTIONS
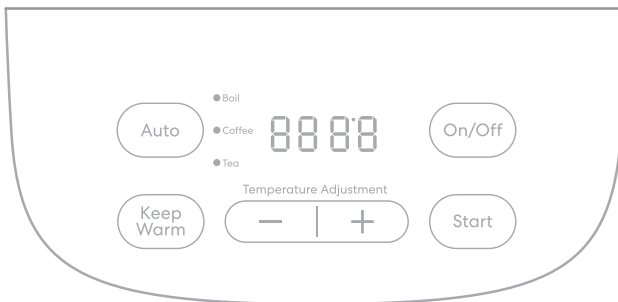
## BEFORE USE

Before using for the first time, or after a long period of nonuse, fill kettle to the MAX level (indicated inside the kettle) with fresh tap water. Boil water, following operation instructions below, then empty kettle. Repeat this process once or twice more. This will clear the kettle of any particulate matter. Always discard water. Do NOT drink discarded water.




BUTTON	FUNCTION DESCRIPTION
 On/Off	<ul style="list-style-type: none"> <li>• Tap to turn on Temperature Indicator.</li> <li>• Tap to shut down heating process; tap again to turn off unit.</li> </ul>
 Keep Warm	<ul style="list-style-type: none"> <li>• Tap once, then use +/- buttons to select from the following keep warm temperatures: 140, 150, 161, 176, 185, 195, 206 °F. NOTE: Button only activates after target temperature has been reached.</li> </ul>
 Start	<ul style="list-style-type: none"> <li>• Tap to heat water to preselected temperature.</li> </ul>
 Auto	<ul style="list-style-type: none"> <li>• Tap repeatedly to cycle through 3 automatic temperature options: boil (212 °F), coffee (195 °F), and tea (165 °F).</li> </ul>
	<ul style="list-style-type: none"> <li>• Tap + or - to select from the following preset temperatures: 140, 150, 161, 176, 185, 195, 206, 212 °F.</li> </ul>

BUTTON	FUNCTION DESCRIPTION
	<ul style="list-style-type: none"> <li>• Displays real-time temperature progression.</li> </ul>
<ul style="list-style-type: none"> <li>● Boil</li> <li>● Coffee</li> <li>● Tea</li> </ul>	<p>Indicator Lights</p> <ul style="list-style-type: none"> <li>• Display 3 preset temperature options: boil (212 °F), coffee (195 °F), and tea (165 °F).</li> </ul>

## OPERATION

- Take off kettle lid and remove kettle from power base. Fill kettle with the desired amount of water. Do NOT fill the kettle less than the MIN level as indicated by the interior line. Do NOT fill the kettle more than the MAX level as indicated by the interior line. Replace the lid and place the kettle back on the power base.
- Plug the unit into an outlet. The ON/OFF button on the power base flashes and the unit beeps. The kettle is in STANDBY mode.
- Tap the ON/OFF button and the Temperature Indicator illuminates, registering 212 °F, the temperature for boiling water.
- Repeatedly tap the AUTO button to cycle through 3 automatic temperature options: boil (212 °F), coffee (195 °F), and tea (165 °F). By tapping the +/- buttons, each selection's temperature can be adjusted to 140, 150, 161, 176, 185, 195, 206, and 212 °F.
- Once you have set the desired temperature, tap START. The ON/OFF button stops flashing and the Temperature Indicator will display the current temperature of the water. The water will begin to heat up. You can monitor temperature progress in the Temperature Indicator display. Once the water reaches the preselected temperature, the unit will beep 3 times. The heating process will automatically end, and the KEEP WARM button will flash. When you lift the kettle from the base, the Temperature Indicator will register----in the display. Pour the water as needed. Set the kettle back on the power base. The KEEP WARM button will flash and the Temperature Indicator will display the current water temperature. Tap the KEEP WARM button to keep the remaining water warm. Tap the +/- buttons if you wish to select a different target temperature.



- 
- If you wish to shut down the heating process at any time, tap the ON/OFF button. The ON/ OFF button will begin to flash, and heating will immediately stop. The unit is in STANDBY mode. Tap the ON/OFF button again to turn the unit off. If you do not do this, the unit will automatically shut down on its own after a few minutes, eliciting a beep as it does.
  - To completely shut down the unit, turn off all modes and unplug unit from outlet.

## **HOW TO POUR**

---

Carefully lift the kettle from the power base. Use caution when pouring water. Do NOT exceed a 90-degree angle while pouring. Pour slowly and steadily. Do NOT remove the lid as scalding may occur.



# CLEANING AND MAINTENANCE

---

## CAUTION

To prolong the life of the kettle, on a regular basis clean mineral deposits that accumulate in the kettle. ALWAYS unplug the unit before cleaning. ALWAYS allow appliance to cool completely before handling.

## WARNING

Do NOT immerse the power base in water or any other liquid.

## CLEANING THE INTERIOR OF THE KETTLE

---

1. Pour 0.5 L of white vinegar into the kettle. Fill the remainder of the kettle with water. Allow kettle to stand for 1 hour.
2. Empty the solution from the kettle. Wipe away any mineral deposits that remain inside the kettle with a clean, damp cloth.
3. Fill the kettle with water to the MAX line. Bring the water to a boil, then discard water safely. Repeat this process several times.

## CLEANING THE EXTERIOR OF THE KETTLE

---

- Do NOT immerse the kettle in water.
- Do NOT use chemicals, steel wool, or abrasive cleaners to clean the exterior of the kettle, as these will scratch the surface and cause discoloration.
- Use a damp cloth to wipe the exterior of the kettle clean. Dry with a soft, dry cloth.

## **SERVICE AND SUPPORT**

### **1 YEAR LIMITED WARRANTY**

This is the only express warranty for this product and is in lieu of any other warranty or condition. This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning the product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover wear from normal use, and operation doesn't conform to the instruction manuals, or damages to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the label.

We exclude all claims for special, incidental, and consequential damages by breach of express or implied warranty. All liability is limited to amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchant-ability or fitness for particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.

This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental consequential damages, so the foregoing limitations may not apply to you. Please note that failure to complete and submit this form does not diminish your warranty



In the Event of a warranty period claim, question, comments or if service is required for this product, please contact us at the following:

Customer Service Management Office:  
Parsippany, NJ 07054  
Toll Free: 1-866-646-4332

Amazon Store:

<https://www.amazon.com/comfee>

Tel: 866-646-4332

E-mail: [officialservice@comfeeappliance.com](mailto:officialservice@comfeeappliance.com)

Made in China